

# ANYCUBIC Wash & Cure Machine 2.0

## Product Description



### Wash Mode

Versatile, easy to use.



### Cure Mode

Wide range UV wavelength compatibility.



### Touch Button

Easy to operate with an responsive and sensitive touch button.




### Safe Design

Auto pause, block 99.95% UV light



## Technical Specifications

- Machine properties: Wash and Cure
- Control method: Digital tube, LED indicator, Control knob
- Rated power: 25W
- Input voltage: AC110/220V 50/60Hz
- UV lights: 405nm
- Time selection:1-60min
- Machine size: 225mm(L) \*235mm(W) \*365mm(H)
- Washing size: 120mm(L) \*74mm(W) \*165mm(H)
- Curing size: 140mm(D) \*165mm(H)
- Weight: 3.7kg

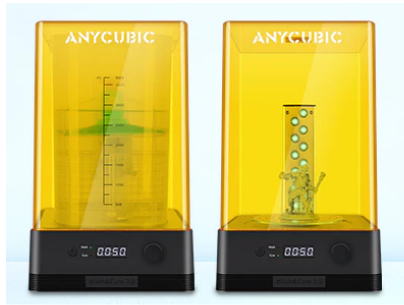

### Dual purpose: Wash and Cure

Supports model washing and curing, more productivity with less effort



### Enclosed washing

Prevents cleaning agent from splashing, more safety and protection



### Rotating curing platform

The platform rotates 360° to ensure even and complete curing. By adding a reflector, the top of the model can be cured



### User Settings are More


### Concise

The time can be adjusted: 1-60 minutes



### UV-blocking Top Cover

With the transparent cover, blocking 99.95% of the UV light

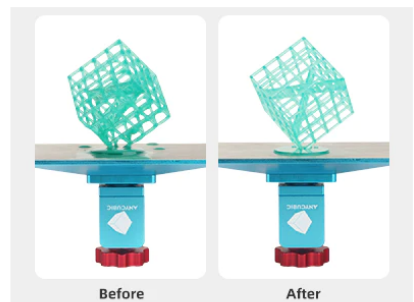

### After Being Washed And

### Cured

Washing and curing can improve the performance of materials

## Parts List



Washing container



Tool set



Power cord



User manual



Washing basket



Stainless steel bearing



Cure platform



Service card



Reflector



Washing-rack