


ANYCUBIC Wash & Cure Plus Machine

Product Description



Wash & Cure Plus

Inherit the features of previous generation and explore larger size and more powerful performance.

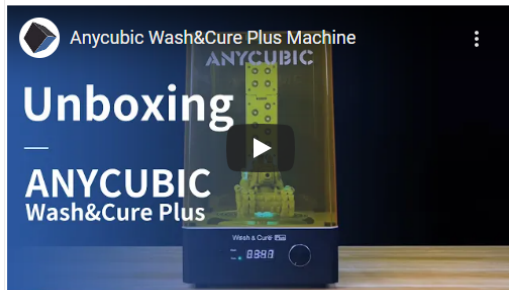

Larger-size

Curing size: 190mm(D)*245mm(H)



Wash Mode

Stronger cleaning power



Cure Mode

360° auto-rotating curing platform.




L-shape Strip Light

Solving the problem of model top part curing.



Technical Specifications

- Machine: Wash and Cure
- Control method: Digital tube, LED indicator, Control knob
- Rated power: 40W
- Input voltage: AC110/240V 50/60Hz
- UV lights: 405nm
- Time selection: 1-60min
- Machine size: 290mm(L)*270mm(W)*479mm(H)
- Basket washing size: 192mm(L)*120mm(W)*290mm(H)
- Hanging cleaning size: 192mm(L)*120mm(W)*235mm(H)
- Curing size: 190mm(D)*245mm(H)
- Weight: ~6.5kg

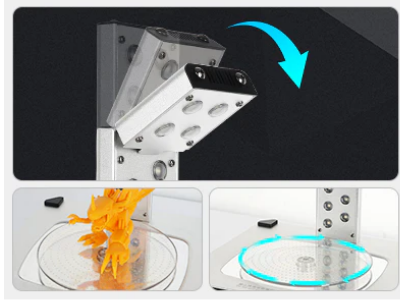

360° Curing

The 360° auto-rotating curing platform, equipped with L-shape strip light and reflective mirror sticker, enables the machine to realize a real thorough curing.



Upgraded UV Lamp Beads

Added with optical lens, the UV light source can achieve more even irradiation and thorough curing.



More Powerful Washing

Multiple washing methods can bring more flexible model cleaning and avoid contact with resin. Basket washing & Hanging cleaning



Stronger Cleaning Power

The super-large cleaning vortex allows the liquid to clean every part of the model, and supports washable resin model cleaning.



Safer To Use

Automatically pause when the cover is removed In the curing mode, the machine will stop curing when the cover is removed to prevent UV light from causing harm to the human body.



Anti-UV light cover

The integrated anti-UV cover is able to block 99.95% 405nm wavelength UV light.



Easier Mode Switching

1-60min time selections provide more choices for washing and curing.



Enclosed Washing Bucket

The washing bucket can accommodate larger size models and is compatible with all LCD resin printers of 8.9-inch and below on the market.



After Cleaning & Curing

The material properties of the resin are significantly improved after cleaning and curing.

Parts List



Washing container



Tool set



Power cord



User manual



Washing basket



Reflector



Cure platform



Service card



Washing rack